

**ULTRALiFE<sup>®</sup>**

**X5**

**Innovative Medical Cart Power**






### X5 Power System (120VAC)

With an output of 120VAC 60Hz, the X5 Power System can power devices up to a maximum of 150W.



### X5 Hot-Swap Battery

A 276.5Wh LiFePO4 battery that powers medical carts via the X5 Power System or X5-SuperLite Battery Cradle.

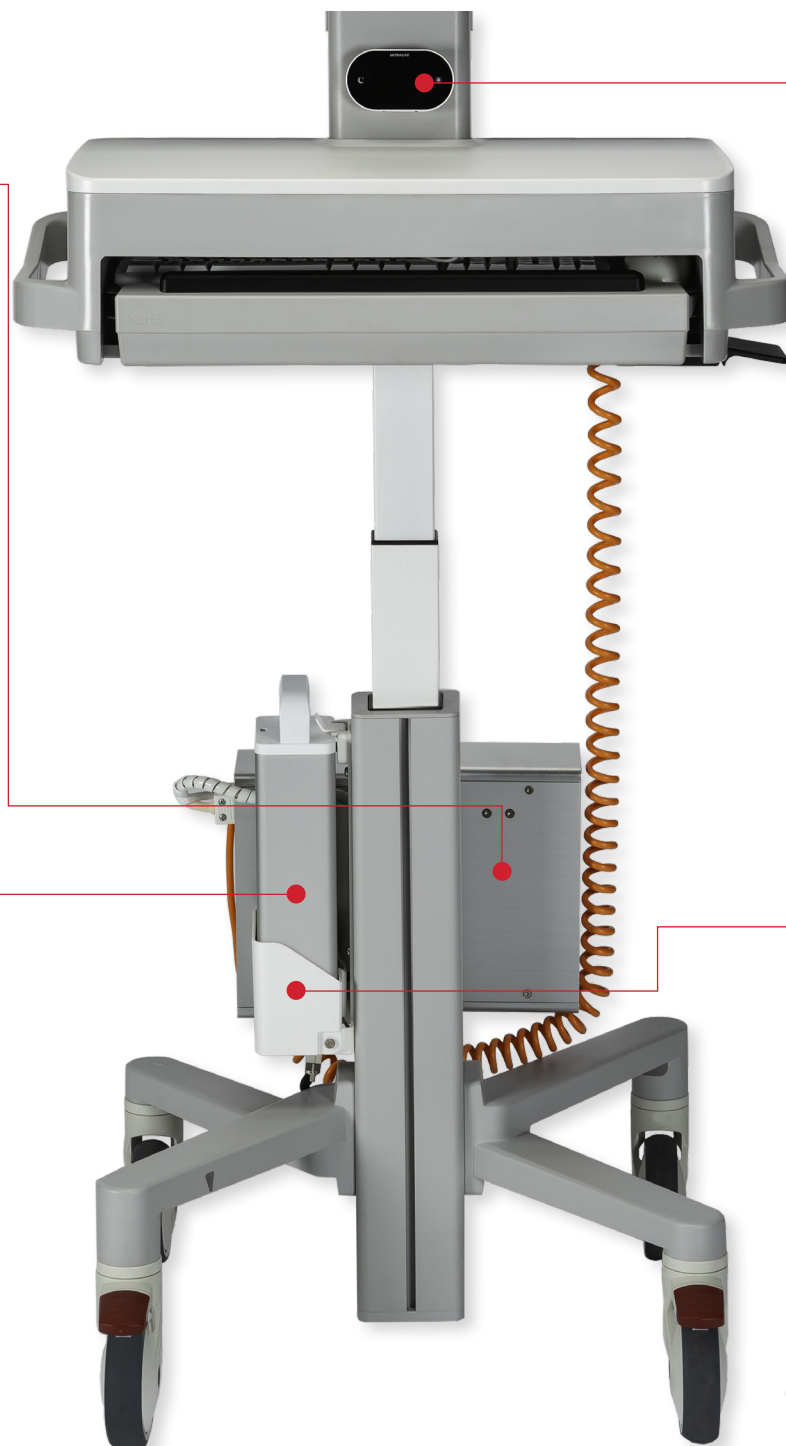

### State-of-Charge Indicator

Optional display showing state-of-charge and status of one or two external X5 Hot-Swap Batteries and the internal Hold-Up Battery.



### X5 Battery Docking Cradle

X5 Hot-Swap Batteries connect to the X5 Power System via the X5 Battery Docking Cradle (15° tilt).



# ULTRALIFE<sup>®</sup> X5



### X5 Battery Charger (Desk & Wall Mount)

- Integrated power supply accepts worldwide AC supply
- Charge one or two X5 Hot-Swap Batteries in under six hours
- Charge batteries simultaneously without compromising charge time
- Quickly determine state-of-charge with status LEDs for each bay
- Supplied in desk stand configuration with a bracket for wall mounting



### X5-SuperLite USB-C Battery Cradle

- Dual-port USB-C DC power alternative to the AC X5 Power System
- Easily power USB-C compatible laptop PCs, tablets/iPads, instruments, and monitors using the X5 Hot-Swappable Battery
- Charge the X5 Hot-Swap Battery via USB-C Charger
- Optional Hold-Up Battery; Optional State-of-Charge Indicator



Scanning the QR-Codes will take you to the technical datasheets on the Ultralife website. Specifications are subject to change.



2000 Technology Parkway  
Newark, New York 14513  
United States

800-332-5000 (USA & Canada)  
+1 315-332-7100  
sales@ultralifecorp.com  
www.ultralifecorp.com

#### Contact Us

With over 30 years' experience in battery manufacturing, Ultralife has the technical expertise to help you select the optimum solution for your cart, devices, and environment.



LEFT BLANK INTENTIONALLY